

UTTERMOST

ASSEMBLY INSTRUCTIONS

ASSEMBLY INSTRUCTIONS

MODEL NUMBER 30738-1

**THANK YOU FOR PURCHASING THIS FLOOR LAMP.
PLEASE FOLLOW THE INSTRUCTIONS LISTED BELOW:**

**CAUTION: DO NOT PLUG INTO WALL OUTLET BEFORE ASSEMBLY.
UNPLUG WHEN REPLACING THE LAMP BULB.**


1. Take the parts carefully out of the carton and place them on a flat surface to prevent any damage.
2. Place the Lamp Shade (B) onto the threaded socket of the Body (A) and rotate it clockwise until it is securely tightened.

IMPORTANT SAFETY INSTRUCTIONS:

This portable lamp has a polarized plug (one blade is wider than the other), as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If it does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not alter this plug.

Care and Maintenance

To clean, wipe with a soft dry cloth.

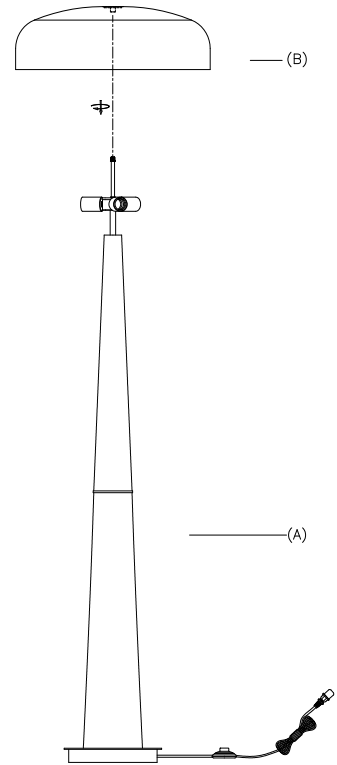

ASSEMBLY INSTRUCTIONS

MODEL NUMBER 30738-1

**THANK YOU FOR PURCHASING THIS FLOOR LAMP.
PLEASE FOLLOW THE INSTRUCTIONS LISTED BELOW:**

**CAUTION: DO NOT PLUG INTO WALL OUTLET BEFORE ASSEMBLY.
UNPLUG WHEN REPLACING THE LAMP BULB.**

1. Take the parts carefully out of the carton and place them on a flat surface to prevent any damage.
2. Place the Lamp Shade (B) onto the threaded socket of the Body (A) and rotate it clockwise until it is securely tightened.

IMPORTANT SAFETY INSTRUCTIONS:

This portable lamp has a polarized plug (one blade is wider than the other), as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If it does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not alter this plug.

Care and Maintenance

To clean, wipe with a soft dry cloth.

