

# UTTERMOST

## ASSEMBLY INSTRUCTIONS

**STYLE#: 30374**

**Carefully unpack all Assembly parts from the carton.**


1. Take the lamp carefully out of the Carton, and place it on a flat surface.

2. Please thread **Part A** into the **Base** by turning **Part A** clockwise to tighten until snug. Be careful not to twist cord tighten it securely.

3. Locate the **Harp** by pressing the ends of the Harp into the **Saddle**.

4. Place the **Shade** over the top end of the **Harp**. Then place Uttermost disk onto the **shade**. Secure by threading the **Finial** onto the **Harp**. Hand tighten until snug.

5. Install correct **Bulb** (Not Included) referring to fixture markings and /or labels for maximum wattage.

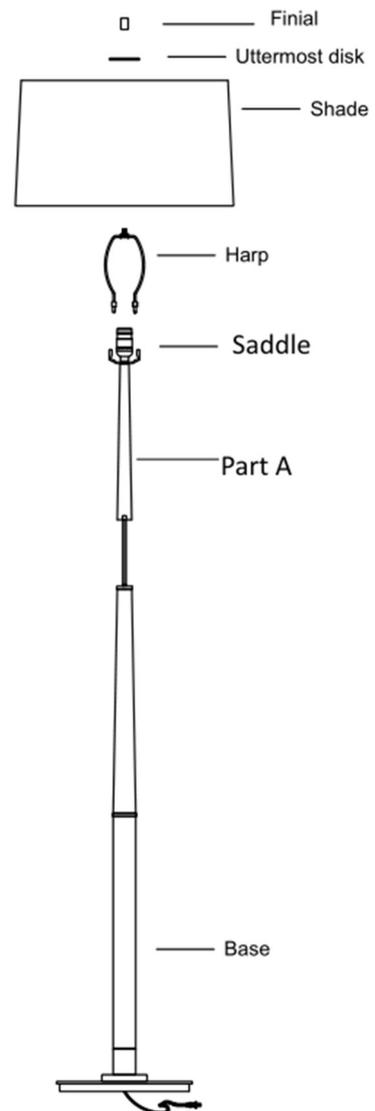

### IMPORTANT SAFETY INSTRUCTIONS

This Floor lamp has a polarized plug (one blade is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not attempt to defeat this safety feature.