
## UTTERMOST ASSEMBLY INSTRUCTIONS

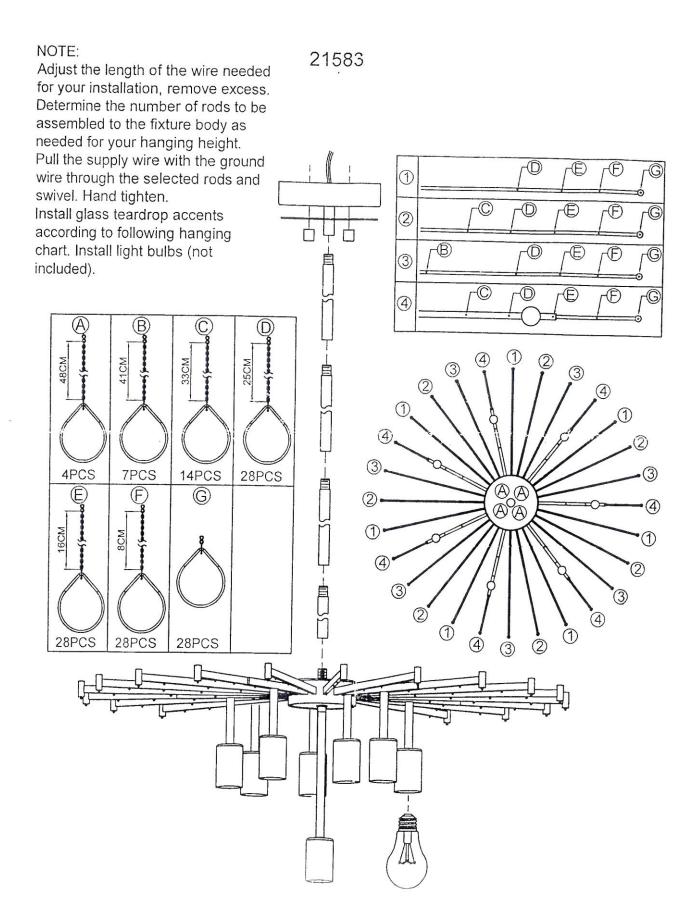

## UTTERMOST ASSEMBLY INSTRUCTIONS

IMPORTANT: FOR A SAFE AND SECURE INSTALLATION, THESE FIXTURES MUST BE INSTALLED BY MEANS OF SUPPORTS THAT ARE INDEPENDENT OF THE OUTLET BOX. YOU SHOULD USE A QUALIFIED ELECTRICIAN TO INSTALL THIS FIXTURE.

NOTE: ALWAYS TURN POWER OFF BEFORE INSTALLING LIGHTING FIXTURES!

## Installation (see Fig. A)

- Disconnect power at main electrical panel before installation.
- 2. Thread long nipple into hickey of mounting strap and secure with nut.
- Place other end of the long nipple through outlet box and ceiling (load-bearing structure) and secure with washer and nut. Then fix mounting strap with box screws.
- 4. Assemble the fixture as shown in reference diagram.
- Raise the fixture to ceiling and place the safety cable through the hickey and secure with lock and screws.

## Wiring (see Fig. B)

- 6. Attach the fixture's wires to the power supply wires from the ceiling. Connect black to black (or smooth); white to white (or ribbed); ground to ground (green or copper). Twist the ends of the wire pairs together, then twist on a wire connector. Make sure all twists are in the same direction.
- Place the canopy on the fixture over the mounting strap and onto the fixture screws, and secure into place using the decorative nuts.

