

UTTERMOST

ASSEMBLY INSTRUCTIONS

STYLE#: 30152-1

Carefully unpack all Assembly parts from the carton.

1. Take the lamp carefully out of the Carton, and place it on a flat surface.
2. Thread **Part A** into the **Base** by turning **Part A** clockwise to tighten until snug.
3. Thread **Part B** into **Part A** by turning **Part B** clockwise to tighten until snug.
4. Loose the **Part C**, adjust **Part D** to the require height. Ensuring **Part D** is vertical, and then turn **Part C** until tight. (Lowering it requires pulling excess cord where is exits the Base.)
5. Locate the **Harp** by pressing the ends of the Harp into the **Saddle** on the top of **Base**.
6. Place the **Shade** over the top end of the **Harp**. Secure by thread the **Finial** onto the **Harp**. Hand tighten until snug.
7. Install correct **Bulbs** (Not Included) referring to fixture markings and /or labels for maximum wattage.

IMPORTANT SAFETY INSTRUCTIONS

This Floor lamp has a polarized plug (one blade is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not attempt to defeat this safety feature.

