








ASSEMBLY INSTRUCTIONS

SKU # 54010241/54010239/54010237

PARTS LIST

A	Headboard X1			Before Beginning 1 - Carefully unpack and position the item on a clean, non-marring surface to assemble. 2 - Read this Assembly Instructions from beginning to end before starting to assemble. 3 - Take an inventory of the required parts to ensure all are available. 4 - To prevent accidental choking hazards, keep all packing materials away from small children. 5 - Only tighten hardware until ALL hardware are fully engaged on their locations. Overtighten bolts will damage the bolt threads. 6 - Use only factory provided hardware to assemble. Unapproved hardware can damage product or jeopardize the structural integrity of the product. 7 - The use of power tool to assemble is not recommended due to high risk of over-torque, which can damage the product.	
B	Footboard X1				
C	Siderails X2				
D	Slats X2				
E	Center Leg X2				
F	Center Support X1				
Z	HARDWARE	Z1  Ø12 x Ø10MM x 2	Z2  Ø20 x Ø10MM x 2	Z3  M6 x 38MM x 2	Z4  M4x 110MM x 1

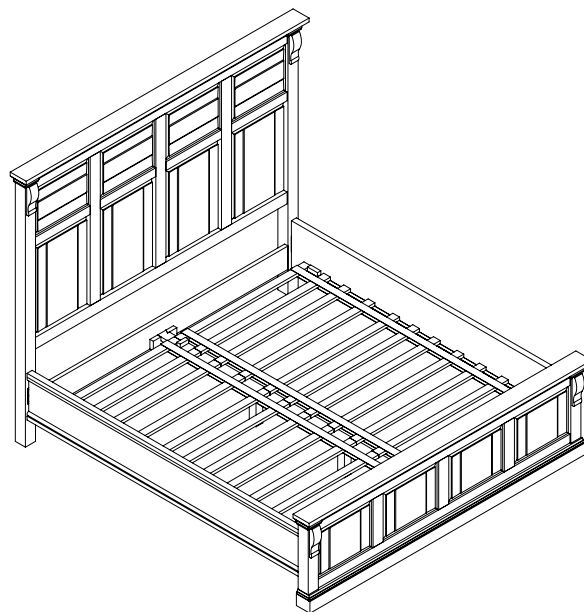


TWO PEOPLE



15-MINUTE
ASSEMBLY TIME




KEEP INSTRUCTIONS
FOR FUTURE USE




ASSEMBLY INSTRUCTIONS
SKU # 54010241/54010239/54010237

1



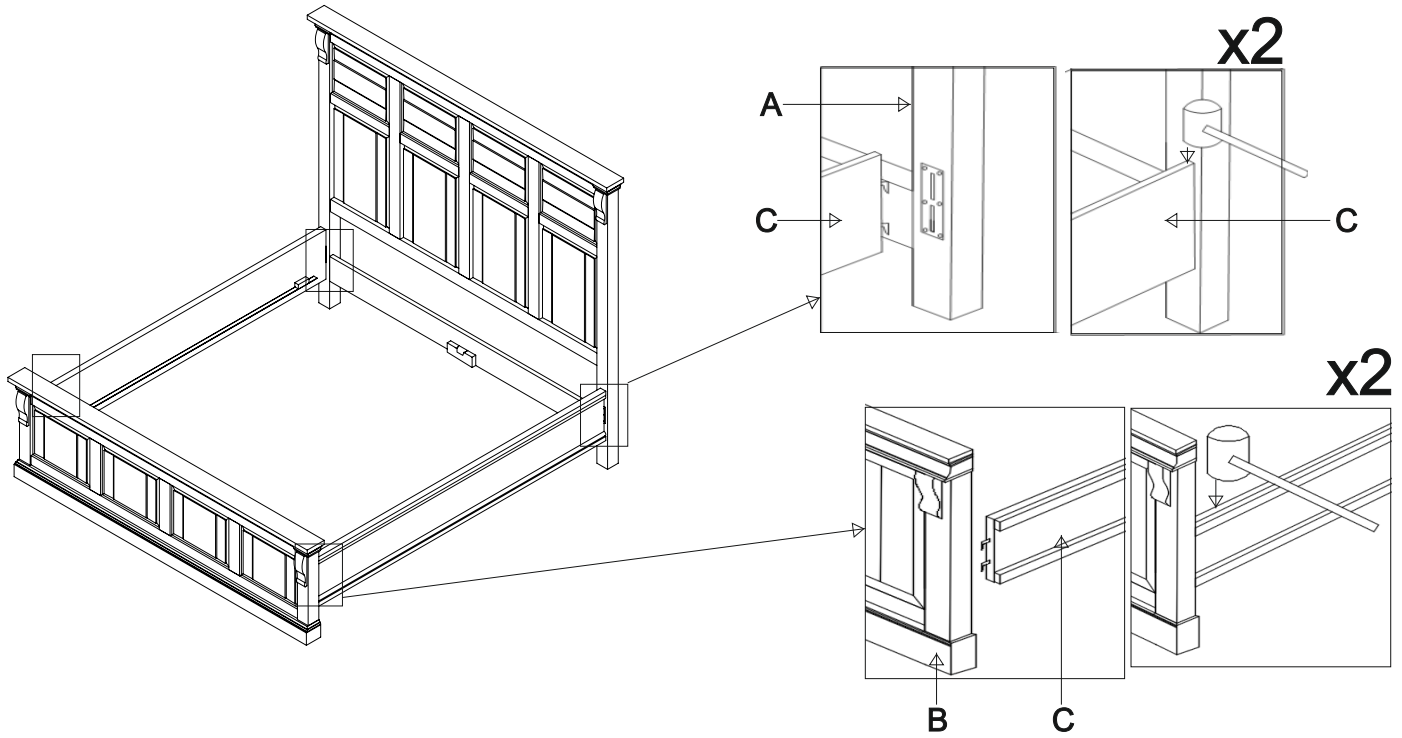


2

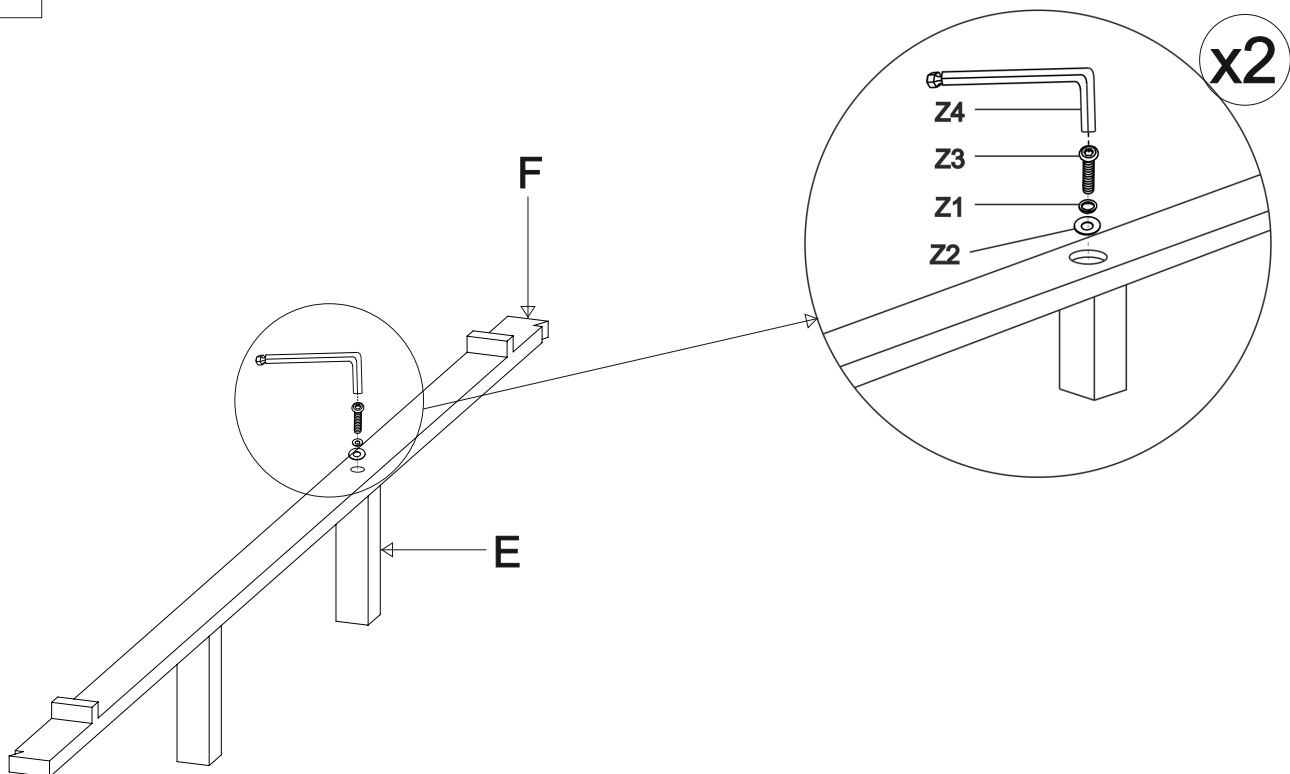


ASSEMBLY INSTRUCTIONS
SKU # 54010241/54010239/54010237

3

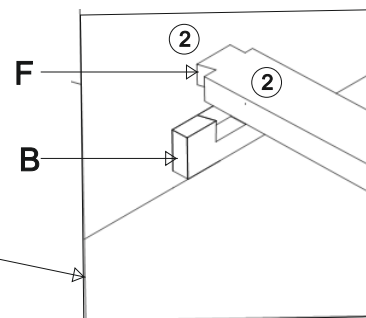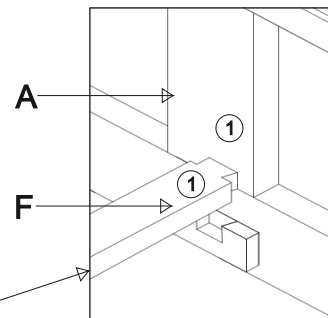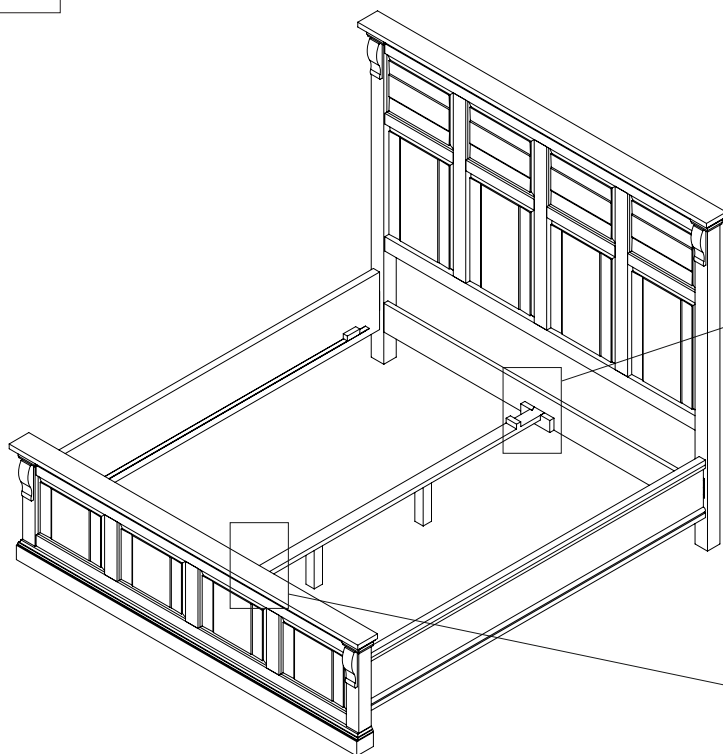

4

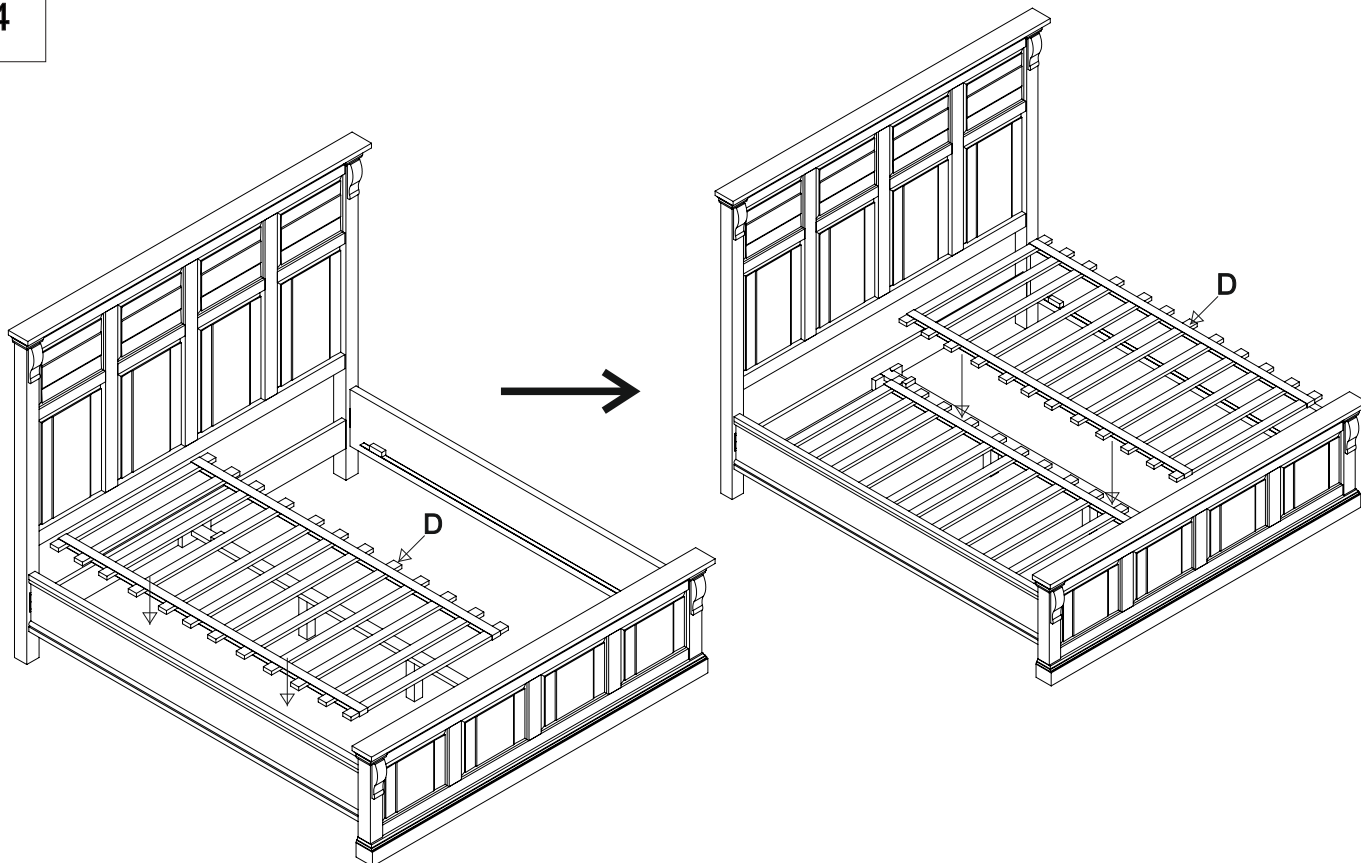

ASSEMBLY INSTRUCTIONS
SKU # 54010241/54010239/54010237

5

