

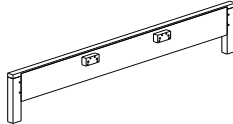
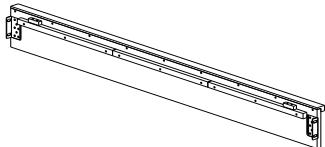
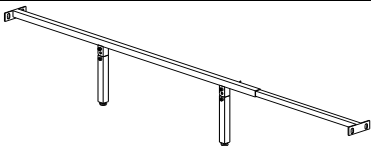
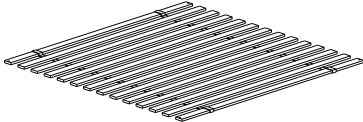





ASSEMBLY INSTRUCTIONS

SKU# 54010250

PARTS LIST

A	HEADBOARD X 1			Before beginning 1) Carefully unpack and position the item on a clean, non-marring surface to assemble. 2) Read this Assembly Instructions from beginning to end before starting to assemble. 3) Take an inventory of the required parts to ensure all are available. 4) To prevent accidental choking hazards, keep all packing materials away from small children. 5) Only tighten hardware until ALL hardware are fully engaged on their locations. Overtighten bolts will damage the bolt threads. 6) Use only factory provided hardware to assemble. Unapproved hardware can damage product or jeopardize the structural integrity of the product. 7) The use of power tool to assemble is not recommended due to high risk of over-torque, which can damage the product.					
B	FOOTBOARD X 1								
C	SIDE RAILS X 2								
D	METAL CENTER RAILS X 2								
E	SLATS X 14								
Z	HARDWARE	Z1  10X40MM X 8	Z2  10X30MM X 8	Z3  10X23X2MM X 16	Z4  10X15X2.6MM X 16	Z5  Open Wrench K17 X 1	Z6  SCREW 4X30MM X 4		

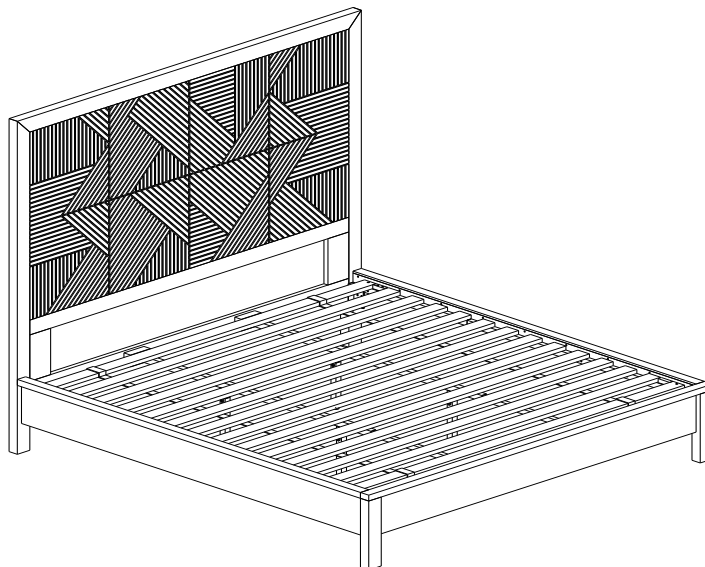


ASSEMBLY REQUIRES
TWO PEOPLE



30-MINUTE
ASSEMBLY TIME




KEEP INSTRUCTIONS
FOR FUTURE USE



ASSEMBLY INSTRUCTIONS


SKU# 54010250

1

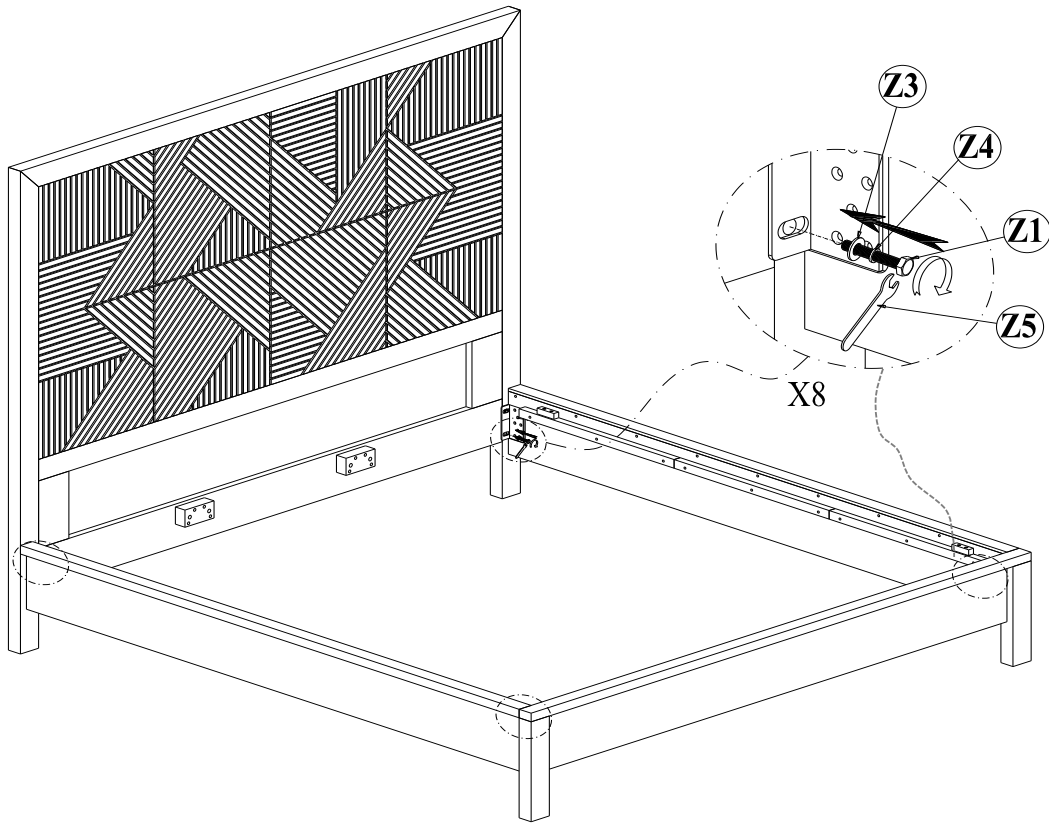

- Lay straight the Headboard (A) and Footboard (B), install two Side Rails (C) by using Bolts (Z1), Spring Washers (Z4), Washers (Z3) and Open Wrench (Z5).


2

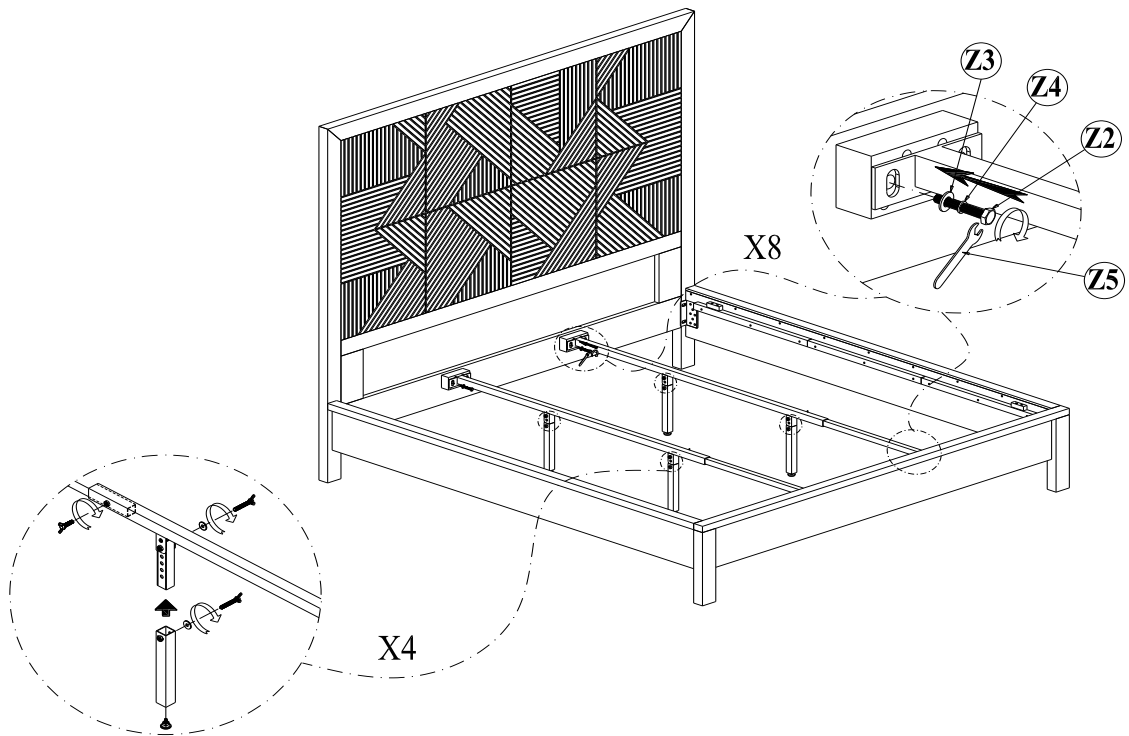

- Install the Metal Center Rails (D) into Headboard (A) and Footboard (B) by using Bolts (Z2), Spring Washers (Z4), Washers (Z3) and Open Wrench (Z5). Then, block Metal Center Rails by KD bolt.
 - Adjust the height of center frame by using Adjustable Bolt.
 - Tighten bolt after fixing 2 ends of the Metal Center Rails.


ASSEMBLY INSTRUCTIONS
SKU# 54010250

3

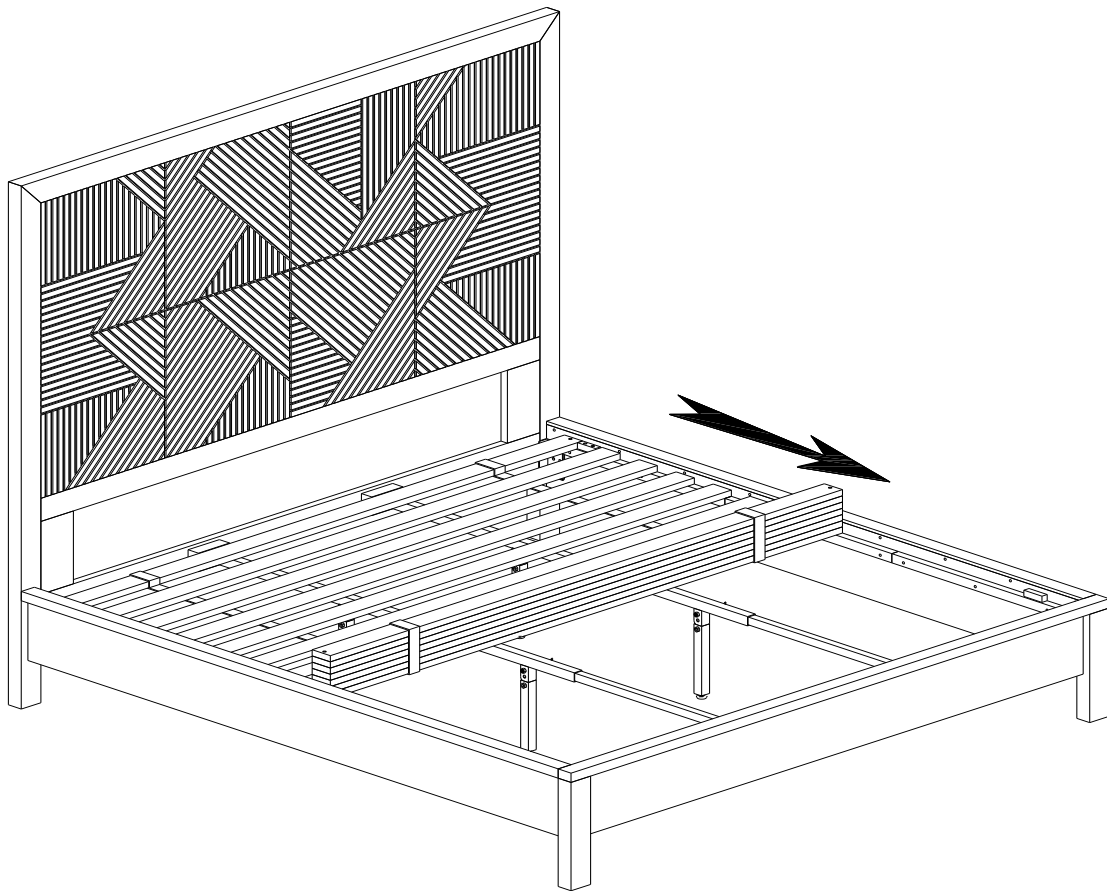

- Install the Slats (E) correctly to the joint.

4

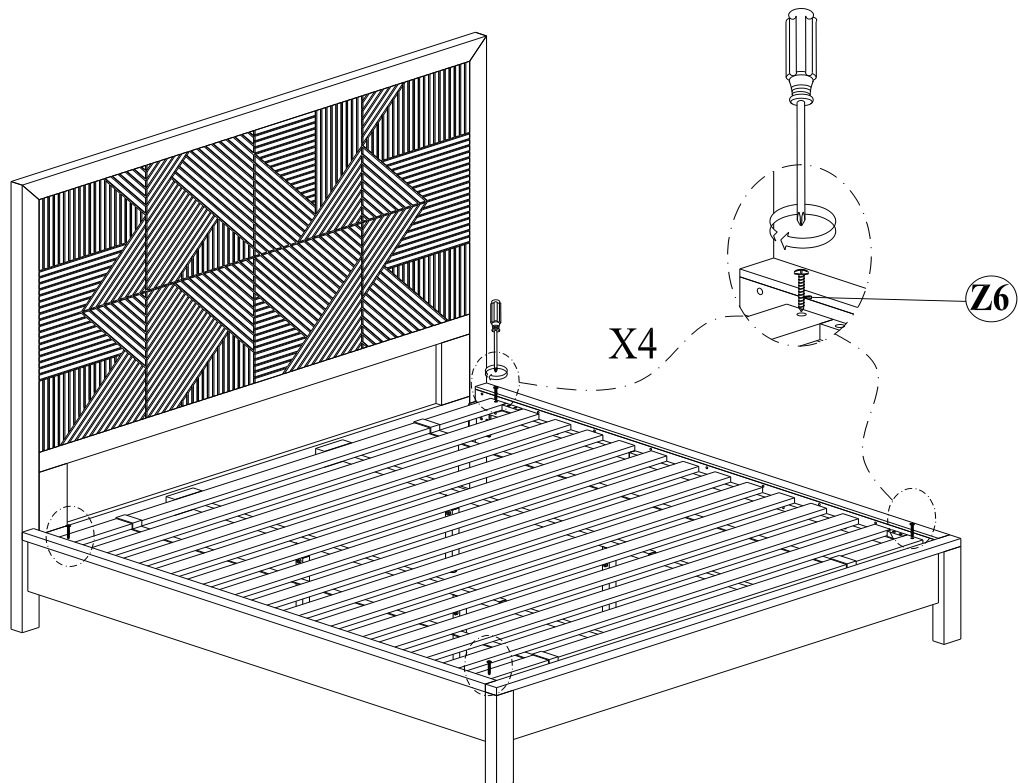

- Secure the slats by fastening Screws (Z6) with the Screwdriver through the predrilled holes located near the ends of the slats
- Completed item.